




Automatic Engine Off – Key in Run Position Automatic Idle Shutdown. – Requires NO User Action

- After 2 minutes of engine running, and all parameters met, the truck will shut itself down and wait for a restart request. All 12V chassis powered options/accessories will continue to operate as if the vehicle is running.
- To Restart - step on the brake or turn the key to start. The chassis will restart and is ready to depart.

Secure Idle – Silver Button on Dash pressed and Key Removed from Ignition. – USER must push Silver Button to Activate.

- With Truck in Park, press the Silver Button to the Left of the steering column. Remove the key after pressing the button within 5 seconds. The vehicle will shut down in 5 seconds if all parameters are met just like Automatic Engine Off. Vehicle will shut down and wait a restart request. During this time, you will know you are in Secure Idle mode when the red ring around the Silver Button is flashing slowly.
- To restart step on the brake (truck will restart) and re-insert the key and turn to the run position. You can also put the key in and start the truck like normal operation. The truck will restart and is ready to depart.

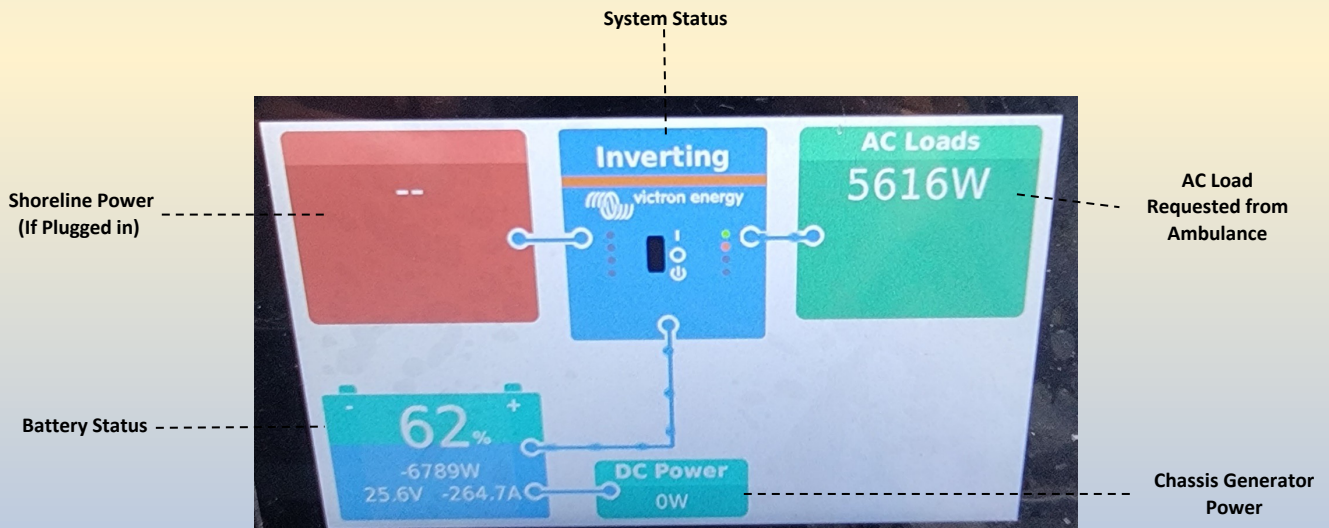

Maintaining 'hPower':

- **Inverter On/Off** Should the vehicle be placed Out of Service for an extended time it is recommended to shut off the inverter to allow the batteries to stay at the current state of charge. – If this does not occur the system will protect itself and shutdown, however once brought back online it will require charging either with the engine running or shore lined to restart.
- **Emergency Battery Disconnect** – Should the system need maintenance this switch will disconnect the Lithium Batteries.
- In the event hPower requires service, call the Harrison Hydragen Support Team @ 281.807.4420. Record any error codes present on the display.